

Prefit Specifications


Frame Hinge and Strike Locations

1 3/4" with 3 Each 4 1/2" Hinges

10241 NORRIS AVE. ♦ PACOIMA, CALIFORNIA 91331-2292 ♦ (818) 896-3094

Effective June, 1997
 Replaces November, 1996

NOTE: When using this chart for premachining door measurements, reduce the A & C dimensions 3/32" each for door clearance.


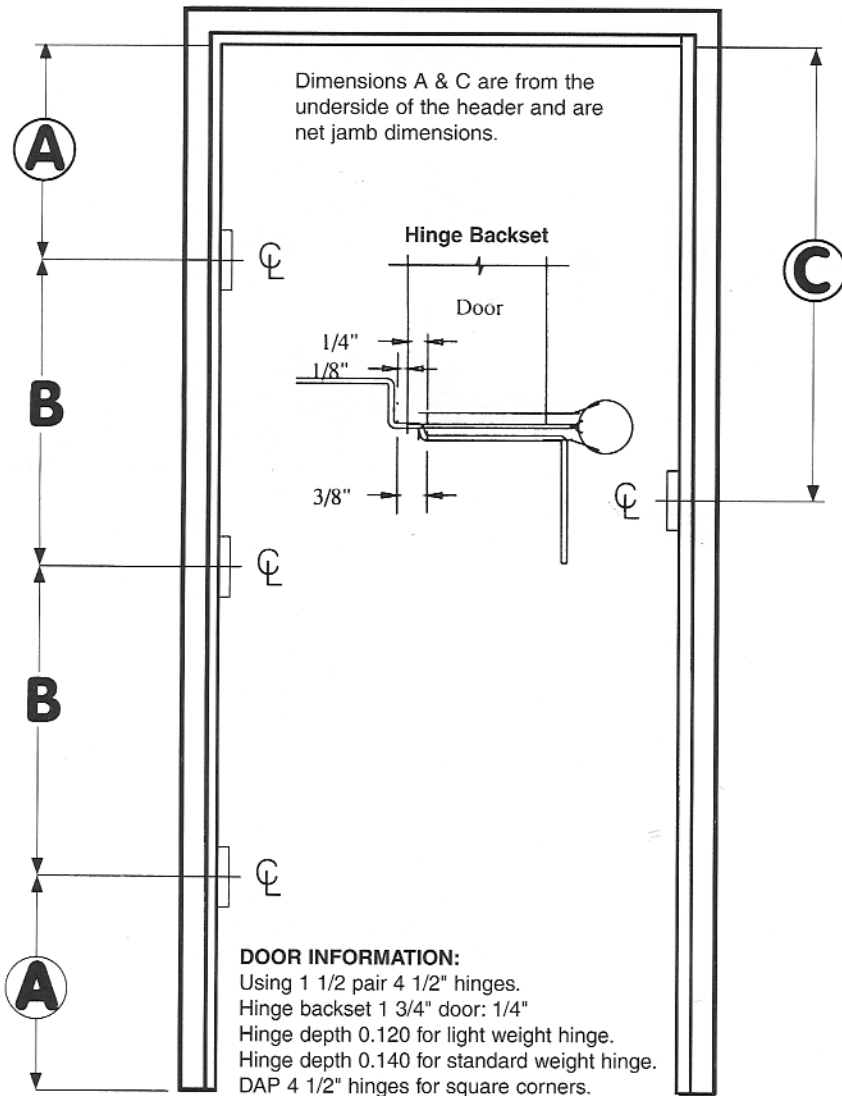


Net Frame Dimensions

+ HEIGHT	A	B	C
5-0	10-19/32	19-1/2	20-3/32
5-1	10-19/32	20	21-3/32
5-2	10-19/32	20-1/2	22-3/32
5-4	10-19/32	21-1/2	24-3/32
6-0	10-19/32	25-1/2	32-3/32
6-8	10-19/32	29-1/2	40-3/32*
6-9	10-19/32	30	41-3/32
6-9	10-19/32	30	40-19/32*
7-0	10-19/32	31-1/2	44-3/32*
7-4	10-19/32	31-1/2	42-3/32*
7-4	10-19/32	33-1/2	48-3/32
7-6	10-19/32	34-1/2	50-3/32
7-8	10-19/32	35-1/2	52-3/32
7-10	10-19/32	36-1/2	54-3/32
8-0	10-19/32	37-1/2	56-3/32
8-4	10-19/32	39-1/2	60-3/32
8-6	10-19/32	40-1/2	62-3/32
8-8	10-19/32	41-1/2	64-3/32
8-10	10-19/32	42-1/2	66-3/32
9-0	10-19/32	43-1/2	68-3/32
10-0	10-19/32	49-1/2	80-3/32

*Reversible - Frame can be used as Left or Right Hand, swing in or out

+ Frame Heights are 3/16" longer than call out door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

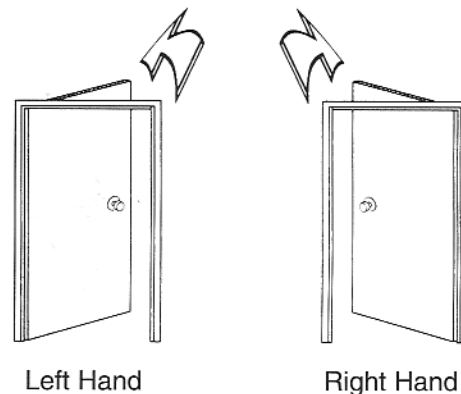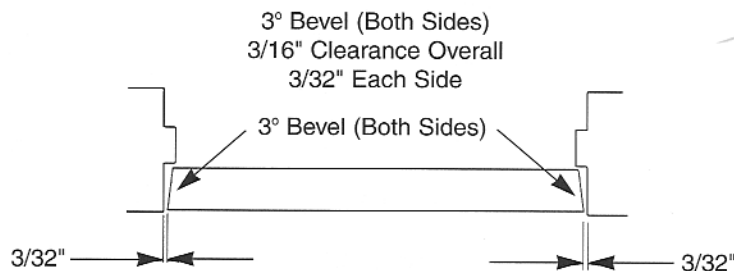

Handing Information
 To establish handing always **Push** the door away from you.

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.